

TOWER®

BUILT FOR BETTER SINCE 1912

T22031

Applicable to all colour variants

2 IN 1 GARMENT STEAMER & IRON



USER MANUAL



GREAT BRITISH DESIGN, INNOVATION AND EXCELLENCE

TABLE OF CONTENTS

IMPORTANT SAFETY INFORMATION

- General safety 3-4
- Whilst ironing 4
- Plug and cord 4
- Wiring safety 5

THIS BOX CONTAINS 6

SPECIFICATIONS 6

GETTING TO KNOW YOUR GARMENT STEAMER 7

BEFORE FIRST USE 8

USING YOUR GARMENT STEAMER

- Filling the water tank 8
- To start using the garment steamer 8
- Automatic shut off 9
- Water shortage protection 9

CLEANING AND CARE 9

TROUBLESHOOTING 10

DISPOSAL OF THE UNIT 10

CUSTOMER SUPPORT 10

IMPORTANT SAFETY INFORMATION

Please read these safety **NOTES** carefully **BEFORE** using your Tower appliance.

These warnings have been provided in the interest of safety. Basic safety precautions should always be followed including the following:

GENERAL SAFETY

- Please ensure that the appliance is used on a stable, level, and heat resistant surface.
- DO NOT immerse cords, plugs or any part of the appliance in water or any other liquid.
- DO NOT leave the appliance unattended while it is operating.
- Close supervision is necessary when any appliance is used by or near children or pets.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should not play with the appliance.
- Cleaning and user maintenance should not be made by children without supervision.
- Switch off at the wall socket then remove the plug from the socket when not in use or before cleaning.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer or its service agent or a similarly qualified person.
- DO NOT let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- The use of accessory attachments is not recommended by the appliance manufacturer, apart from those supplied with this product. DO NOT use extension cords with the appliance.
- DO NOT pull the plug out by the cord as this may damage the plug and/or the cable.
- DO NOT use this product for anything other than its intended use.

IMPORTANT SAFETY INFORMATION

- DO NOT carry the appliance by the power cord.
- DO NOT use the appliance outdoors.

WHILST STEAMING

- The temperature of accessible surfaces may be high when the appliance is operating.
- DO NOT let the cord touch any hot surfaces, such as stovetops, etc.
- NOTE: The steam head gets extremely hot during operation. NEVER touch the steam head when the unit is turned on.
- The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the Customer Support Team.


PLUG AND CORD

- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer, its service agent or a similarly qualified person.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- DO NOT plug and unplug with wet hands.

It is important that this instruction manual is retained for future reference.

If the appliance is given to someone else, it should always be accompanied by these operating instructions, as they form an integral part of the appliance.

WIRING SAFETY FOR UK USE ONLY

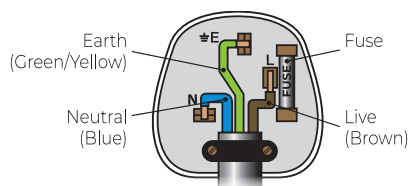

IMPORTANT: As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are labelled in accordance with the following code:

Blue neutral [N] Brown live [L] Green/Yellow [EARTH] 

PLUG FITTING DETAILS (WHERE APPLICABLE).

- Plug Fitting Details (Where Applicable). The wire labelled blue is the neutral and must be connected to the terminal marked [N].
- The wire labelled brown is the live wire and must be connected to the terminal marked [L].
- The wire labelled green/yellow must be connected to the terminal marked with the letter [E].
- On no account must either the brown or the blue wire be connected to the [EARTH] terminal.

- Always ensure that the cord grip is fastened correctly.
- The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.
- If in doubt consult a qualified electrician who will be pleased to do this for you.

NON-REWIREABLE MAINS PLUG.

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - disconnect it from the mains - then cut it off of the mains lead and immediately dispose of it in a safe manner. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the Customer Support Team.

THIS BOX CONTAINS

Instruction Manual

2 in 1 Garment Steamer & Iron

Fabric Brush

Measuring cup



SPECIFICATIONS

RATED VOLTAGE	220-240V
FREQUENCY	50/60Hz
POWER CONSUMPTION	1400-1800W
STANDBY MODE	0.2W
OFF MODE	N/A
WATER TANK CAPACITY	180ml

GETTING TO KNOW YOUR GARMENT STEAMER

1. Water inlet cover
2. LED display panel
3. SET button
4. Steam button
5. Steam lock
6. Water tank
7. Soleplate



BEFORE FIRST USE

NOTE: Every effort has been made to ensure this item reaches you in perfect condition. However, due to our rigorous testing and quality processes before the unit leaves our production facility, there may be a small amount of water residue left in the water tank. This is nothing to worry about and the product can be used as normal.

1. Remove the appliance from the packaging and check for any visible damage to the appliance, cord and plug.
2. Remove any stickers, protective foil or storage cover from the soleplate.
3. Clean the exterior surface of the garment steamer and soleplate with a soft, damp cloth and dry thoroughly and in accordance with the instructions in the Cleaning and Care section below.

4. Fill the water tank with clean water, and then empty it to ensure that the tank is clear of any manufacturing residues.
5. Your garment steamer is now ready for normal use.
6. Dispose of the packaging in a responsible manner.

NOTE: When using the appliance for the first time, a slight odour and small amount of smoke may be emitted. This is normal and will soon subside. Ensure that there is sufficient ventilation around appliance.

NOTE: When using the appliance for the first time, test the garment steamer on a piece of remnant cloth to ensure that it is working correctly.

USING YOUR GARMENT STEAMER

FILLING THE TANK WITH WATER:

CAUTION! Before filling the tank with water make sure the appliance is unplugged.


1. Place the garment steamer in the tilted position. Open the water inlet cover. Slowly pour water through the water inlet, ensuring that any spillage is wiped off the unit.
2. Do not fill higher than “MAX” marking on the water tank. Tip out any excess if needed.

NOTE: Your garment steamer is designed to use tap water. However, if your tap water is particularly hard, it is advisable to use distilled or purified water.

TO START USING THE GARMENT STEAMER:

1. Fill the tank with water, as detailed. Ensure that the steamer's tank has water in it below the MAX line. Refill the unit's tank if needed.
2. Check the label of the garment that you would like to steam / iron. If uncertain, iron a part of the garment that is not normally visible first before ironing the whole thing.
3. Hang the garment up away from anything that will be affected by steam and heat.
4. Plug the unit in. When the unit is plugged in, the red pilot light on the LED display will turn on.
5. Press the SET button to turn the unit on. The unit's LED display will start a timer countdown from 9 to 1 as the unit preheats for roughly 20 seconds.

USING YOUR GARMENT STEAMER

6. When the unit is ready for use, "0" will be on the display, and the  indicator will light up.

The unit has three steam settings which are represented by icons on the LED display. Each icon will light up green when selected:

 : No steam

 : Low steam

 : High steam

To select between these three settings, press the SET button. The LED display will show 0 for no steam, 1 for low steam and 2 for high steam.

To generate steam, simply set the unit on either Low or High steam settings, and press the trigger located on the handle of the unit. To continuously generate steam, you can slide the lock downwards (fig.1) on the trigger and the unit will generate steam without you having to hold it down constantly. To turn off the steam, slide the lock upwards (fig.2) and release the trigger.



Fig. 1



Fig. 2

CLEANING AND CARE

WARNING! Do not immerse the appliance in water or any other liquid.

1. DO NOT allow water or any other liquid to enter the unit.
2. Wipe the outside of the appliance with a damp cloth.
3. Ensure all parts are thoroughly dry before use.

To turn the unit off, press and hold the SET button until the LED display turns off, but the red pilot light is still on. Unplug the unit. Empty out any water to reduce limescale deposits.

When the unit is in use, you can rest it on the rubber face just behind the soleplate. The unit is weighted so that on a level surface the end of the handle and the rubber face will sit steadily on any surface, preventing the hot soleplate from touching anything when you set the unit down in this manner.

AUTOMATIC SHUT OFF

The device has an automatic shut off which trips if the unit has been left on for 5 minutes without any operation. Press the SET button if this happens, and the unit will turn back on again.

WATER SHORTAGE PROTECTION

The Steam function will automatically stop in 30 seconds after the tank is empty. When the tank is empty "E" will be shown on the control panel. The No Steam icon will also flash to remind you to refill the tank. Release the steam trigger and press SET and the shortage protection will reset.

STORAGE

- Ensure to empty the unit of any liquid before storage.
- Ensure that the unit has cooled down completely before storage.
- Do not wrap the power cord aggressively around the unit.
- Store the appliance in a cool and dry place.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
No steam is being emitted	There is insufficient water in the water tank. The pump is still drawing water from the water tank.	Fill the water tank following the instructions in the section entitled 'Filling the water tank'.
Excess water is dripping from the ceramic soleplate	This is due to condensation inside the soleplate.	Allow the iron to heat up to the selected temperature before using.
The unit has stopped working.	The automatic cut out has been triggered as the unit has been inactive for over 5 minutes.	Press SET once.

DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



CUSTOMER SUPPORT

If you have any questions or concerns about your new product, or you need any spare part replacements and accessories, we have these available to purchase. Please contact our helpful Customer Support Team:



+44 (0) 333 220 6066



www.towerhousewares.co.uk

Please have your Model No. available. This can be found on the front cover of this instruction manual and on the appliance's rating label. Below are the available items that can be purchased for your appliance

TOWER®

BUILT FOR BETTER SINCE 1912

thank you!

We hope you enjoy your appliance for many years...

This product is guaranteed for 12 months from the date of original purchase.

If any defect arises due to faulty materials or workmanship, the faulty products must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

THE FOLLOWING CONDITIONS APPLY:

The product must be returned to the retailer with proof of purchase or a receipt.

The product must be installed and used in accordance with the instructions contained in this instruction guide.

It must be used only for domestic purposes.

It does not cover wear and tear, damage, misuse or consumable parts.

Tower has limited liability for incidental or consequential loss or damage.

This guarantee is valid in the UK and Eire only.

The standard one year guarantee is only extended to the maximum available for each particular product upon

registration of the product within 28 days of purchase. If you do not register the product with us within the 28 day period, your product is guaranteed for 1 year only.

To validate your extended warranty, please visit **www.towerhousewares.co.uk** and register with us online.

Please note that length of extended warranty offered is dependent on product type and that each qualifying product needs to be registered individually in order to extend its warranty past the standard 1 year.

Extended warranty is only valid with proof of purchase or receipt.

Your warranty becomes void should you decide to use non Tower spare parts.

Spare parts can be purchased from **www.towerhousewares.co.uk**

Or call our Customer Support Team on:
+44 (0) 333 220 6066

