


goodFOOD

in partnership
with

TOWER

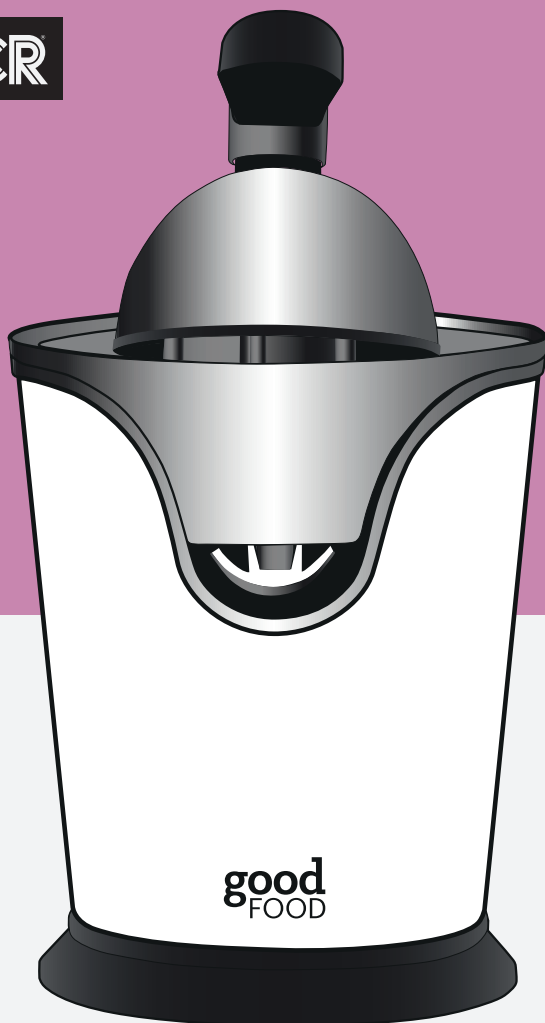

100W

Stainless Steel Citrus Juicer

User Instruction Manual

GF12016





Delicious, healthy and natural juices one sip at a time!

Join the juicing revolution with the
100W Stainless Steel Citrus Juicer from
Good Food in partnership with Tower.
Specifically designed to be used with the vast
Good Food recipe library, making it perfect for
health enthusiasts who want to incorporate more
fruit in their diet

Table of contents

This box contains	4
Specifications	4
Important safety information	5
- General safety	5
- Plug and cord	6
- While blending	6
Getting to know your Appliance	7
Before first use	7
Using your Appliance	8
Troubleshooting	9
Spare and Accessories	9
Cleaning and care	10
Disposal of the unit	10
Notes	11
Customer support	12
Thankyou	12

This box contains

- Instruction Manual
- Freeflow Citrus Juicer
- Large Juice Press
- Small Juice Press
- Pulp Filter
- Juice Tank



Specifications

Rated voltage	AC 220 - 240v
Frequency	50/60Hz
Power consumption	100W

Important safety information

Please read these safety **NOTES** carefully **BEFORE** using your Tower appliance.

These warnings have been provided in the interest of safety. Basic safety precautions should always be followed including the following:

GENERAL SAFETY

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- Please ensure that the appliance is used on a stable, level, and heat resistant surface.
- DO NOT immerse cords, plugs or any part of the appliance in water or any other liquid.
- DO NOT leave the appliance unattended while it is plugged in.
- Close supervision is necessary when any appliance is used by or near children or pets.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should not play with the appliance.

It is important that this user instruction manual is retained for future reference.

If the appliance is given to someone else, it should always be accompanied by these operating instructions, as they form an integral part of the appliance.

- Cleaning and user maintenance should not be made by children without supervision.
- DO NOT use this product for anything other than its intended use.
- This appliance is for household use only.
- DO NOT place on or near a hot gas burner, hot electric burner, or in a heated oven.
- DO NOT place the appliance in the refrigerator.
- Retain the instructions for future reference.

Whilst Juicing

- DO NOT use the appliance outdoors.
- DO NOT spill liquid onto the base unit. If this happens switch off and unplug from the mains, mop up the liquid and seek advice from a qualified technician.
- This appliance is not intended for commercial use.
- The appliance is only to be used with the accessories provided.
- Always ensure that the juice presses and pulp filter are securely in place before using the appliance.
- Switch the juicer off at the wall socket before assembling or disassembling it.
- Avoid contact with moving parts.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the CustomerSupport Team: +44 (0) 333 220 6066

Important safety information

PLUG AND CORD

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- **WARNING:** Do not let the cord hang over the edge of a table or counter, serious injuries may result from the juicer being pulled off the counter where it may be grabbed by children or become entangled with the user.
- Do not let the supply cord touch hot surfaces.
- Do not carry the appliance by the power cord.
- Do not use any extension cord with this appliance.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Do not pull the plug out by the cord as this may damage the plug and/or the cable.
- Do not plug and unplug with wet hands.

It is important that this user instruction manual is retained for future reference.

If the appliance is given to someone else, it should always be accompanied by these operating instructions, as they form an integral part of the appliance.

Getting to know your appliance

- A. Juicer head
- B. Juicing tank
- C. Rotation shaft
- D. Motor housing
- E. Pulp filter
- F. Large juice press
- G. Small juice press



Before first use

Read all instructions and safety information carefully before first use. Please retain this information for future reference.

2. Remove all parts from the packaging.
3. Wash all detachable parts in warm soapy water and rinse. DO NOT immerse the base and power cord in water. Wipe the base unit with a soft, damp cloth.
4. Allow the parts to dry.
5. The appliance is now ready for normal use.
6. Dispose of the packaging in a responsible manner.

Using your appliance

ATTACHING AND REMOVING ACCESSORIES

NOTE: Use fresh, washed fruit and ensure that the components are clean before operating.

NOTE: Please ensure the spout is in the upright position before juicing.

1. Cut the citrus fruits in half.

CAUTION! Please have a vessel ready to catch your juice.

2. Select the correct cone for the size of the fruit
2. Place the cut fruit onto the juice press and push the unit's handle downwards onto a horizontal position to exert pressure and begin the juicing process.
4. Once you apply pressure to the fruit on the cone, juicing will slowly begin. The juice press will start turning and the juice will gradually begin to flow into the juice tank.

CAUTION! DO NOT exert excessive pressure on the juice press.

5. Once the juice tank is at capacity, push the spout at the front of the unit down so that the juice flows from the tank into your vessel. Alternatively, pull the spout up to capture the juice within the tank.
6. Once the juice tank is empty, push the spout back up to its original position.
7. Lift the unit's handle back to a vertical position at any time to release the pressure on the juice press and stop it turning.
8. When done juicing, switch the citrus juicer off and unplug it from the mains.
9. Remove the juice press, pulp filter and juice tank and prepare for cleaning.



TIPS

1. Microwaving the citrus fruits for a short amount of time can help produce more juice.
2. If the juice press is not turning, check if there are fruit pips/seeds between the press and the filter, and remove them if necessary.

Troubleshooting

Problem	Solution
The citrus juicer is not working.	Ensure the appliance is connected to a working power outlet. Ensure the appliance is assembled correctly and all the parts are secured into place.
The juice press has stopped turning.	Try applying a little extra pressure to the juice press. Check to see if there is anything on top of the filter. Check if fruit seeds/pips have been caught between the juice press and the filter.

Spares and Accessories

Part No	Description	Image
GF1206202	Pulp Filter	
GF1206202	Citrus Cones	

Cleaning and Care

1. Always remove the plug from the mains supply before cleaning the juicer.
2. Clean the removable parts immediately after use.

NOTE: Clean the juice presses in between uses, as fruit pulp will start to build up on them.

3. Disassemble all removable parts before cleaning them.
4. Clean all removable parts in warm soapy water.
5. Rinse and dry completely.
6. Clean the exterior of the juicer base with a soft damp cloth.

WARNING: DO NOT submerge the base, power cable or plug in water or any other liquid.

CAUTION! The base is NOT dishwasher safe.

7. **DO NOT** use abrasive cleaning agents.
8. **DO NOT** use boiling water to clean the juicer.

TO STORE YOUR APPLIANCE:

- Ensure the appliance is completely clean and dry before storing.
- Unplug the power cord from the power outlet and clean as detailed in the Cleaning and Care section opposite.
- Store on a flat, dry level surface out of reach of children.

DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



Notes

goodFOOD

in partnership
with

TOWER

thank you!

We hope you enjoy your appliance for many years...

Extended warranty is only valid with proof of purchase or receipt. Your warranty becomes void should you decide to use non Tower spare parts

Spare parts can be purchased from www.towerhousewares.co.uk

Or call our customer Support Team on:

+44 (0) 333 220 6066

