

TOWER®

BUILT FOR BETTER SINCE 1912

MODEL: T19053

1.2 LITRE COUNTERTOP ICE MAKER



USER MANUAL



GREAT BRITISH DESIGN, INNOVATION AND EXCELLENCE

TABLE OF CONTENTS

IMPORTANT SAFETY INFORMATION	3
• General safety	3
• Whilst using the unit	3-4
• Plug and cord	4-5
• Wiring safety	6
THIS BOX CONTAINS	7
SPECIFICATIONS	7
STRUCTURE OF YOUR APPLIANCE	8
BEFORE FIRST USE	9
• Preparing for use	9
USING YOUR ICE MAKER	9-10
• Installing the carry handle	9
• Filling the water tank	9
• Turning the unit On/Off	9
• Size selection	10
• The self-cleaning function	10
TROUBLESHOOTING	10
CLEANING AND CARE	10-11
DISPOSAL OF THE UNIT	11
CUSTOMER SUPPORT	11

IMPORTANT SAFETY INFORMATION

Please read these safety notes carefully **BEFORE** using your Tower appliance.

These warnings have been provided in the interest of safety. Basic safety precautions should always be followed including the following:

GENERAL SAFETY

- Close supervision is necessary when any appliance is used by or near children.
- Children should not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance should not be undertaken by children without supervision.
- Take care when any appliance is used near pets.
- The use of accessory attachments is not recommended by the appliance manufacturer, apart from those supplied with this product.
- Do not place the appliance on or near a hot stove top or heated oven.
- This appliance is for household use only.
- Do not place anything on top of the appliance.
- Do not use this appliance for anything other than its intended use.

WHILST USING THE UNIT

- DO NOT touch the evaporator whilst the unit is in use, as it may cause frostbite.
- Do not use with water that is microbiologically unsafe or of unknown quality. Only use potable water.
- Do not clean your ice maker with any flammable fluids. The fumes may create a fire hazard or explosion.
- Do not overturn the ice maker. If the ice maker is overturned accidentally, stand it on a flat and even surface for about 2 hours before attempting to use it again.

IMPORTANT SAFETY INFORMATION

- If the ice maker is brought in from low temperatures, do not use it for a few hours, to allow the unit to warm up to the room temperature.
- **NEVER** put flammable, explosive and corrosive articles into the ice maker.
- **NEVER** use the ice maker when there is a flammable gas leakage.
- To prevent fires, **NEVER** store or use gases and other flammable articles near the ice maker.
- Unplug the ice maker before moving it, to avoid damaging the refrigerating system.
- **WARNING:** Keep all ventilation openings clear of any obstructions.
- **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- **WARNING:** Do not damage the refrigerant circuit.
- **WARNING:** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- **DO NOT** store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Only carry the unit by the included carry handle.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the Customer Support Team.

PLUG AND CORD

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- **WARNING:** Do not let the cord hang over the edge of a table or counter, serious injury may result from the appliance being pulled off the counter where it may be grabbed by children or become entangled with the user.

 
IMPORTANT SAFETY INFORMATION

- Do not let the supply cord touch hot surfaces.
- Do not carry the appliance by the power cord.
- Do not use any extension cord with this appliance.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Do not pull the plug out by the cord as this may damage the plug and/or the cable.
- Do not plug and unplug with wet hands.

It is important that this instruction manual is retained for future reference.

If the appliance is given to someone else, it should always be accompanied by these operating instructions, as they form an integral part of the appliance.

WIRING SAFETY FOR UK USE ONLY

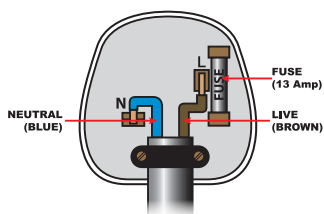


IMPORTANT: As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue neutral [N] Brown live [L]

PLUG FITTING DETAILS (WHERE APPLICABLE).

- The wire coloured blue is the neutral and must be connected to the terminal marked [N] or coloured black.
- The wire coloured brown is the live wire and must be connected to the terminal marked [L] or coloured red.
- On no account must either the brown or the blue wire be connected to the [EARTH] terminal .

- Always ensure that the cord grip is fastened correctly.
- The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.
- If in doubt consult a qualified electrician who will be pleased to do this for you.

NON-REWIREABLE MAINS PLUG.

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug – disconnect it from the mains – and then cut it off of the mains lead and immediately dispose of it in a safe manner. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the Customer Support Team.

THIS BOX CONTAINS

Instruction manual

Ice maker

Ice tray

Ice scoop

Carry handle




SPECIFICATIONS

RATED VOLTAGE	220-240V
FREQUENCY	50Hz
POWER CONSUMPTION	150W


STRUCTURE OF YOUR APPLIANCE

 1. Control panel
2. Top Lid
3. Handle
4. Viewing window
5. Front housing
6. Filter
7. Drain plug
8. "MAX" water level
9. Evaporator
10. Ice shovel
11. Ice tray
12. Ice basket
13. Ice scoop

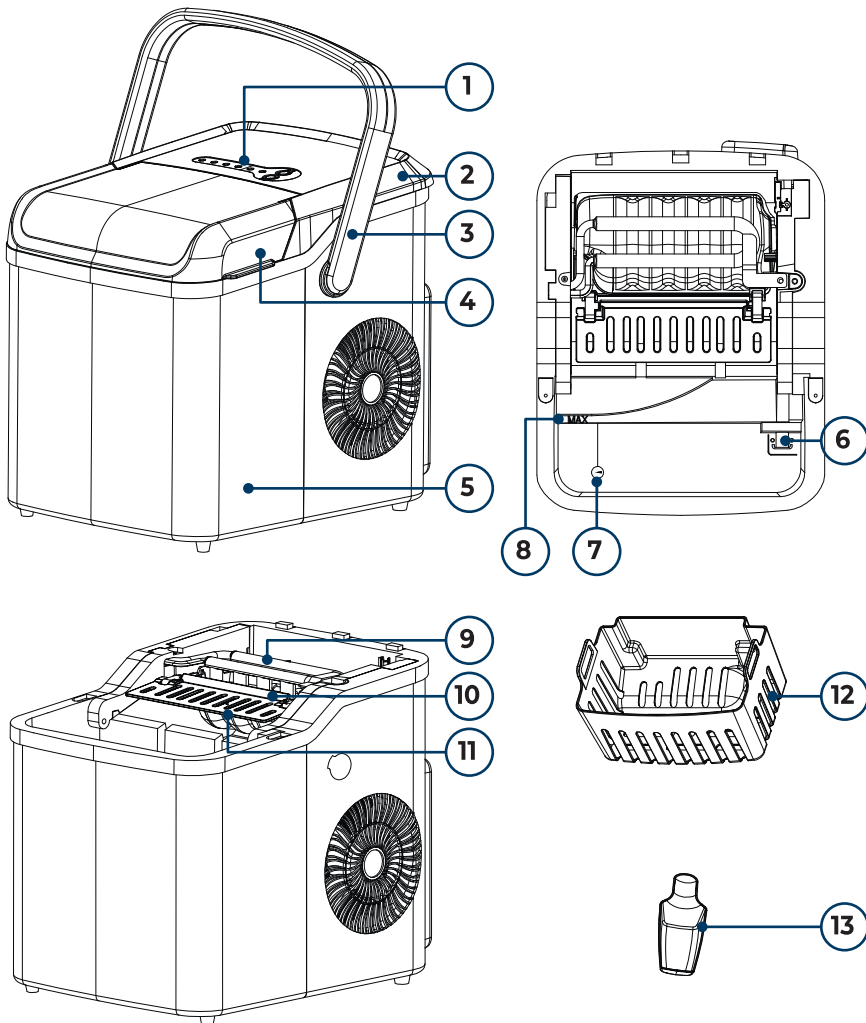

STRUCTURE OF YOUR APPLIANCE

 1. On/Standby button
2. Small Ice Bullets button
3. Large Ice Bullets button
4. Ice Basket Full button
5. Water Tank Full button
6. Cleaning button
7. Mode Selection button
8. On/Off / Start/Pause button

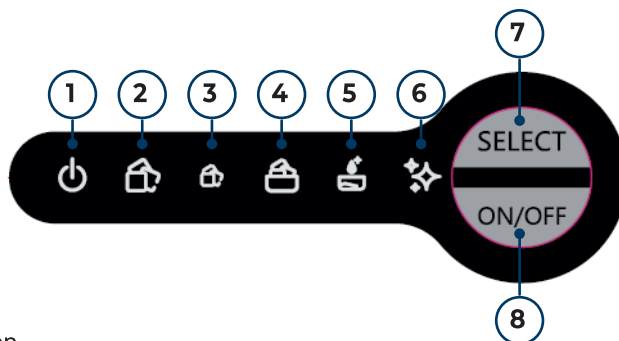

BEFORE FIRST USE


PREPARING FOR USE

NOTE: Read all instructions and safety information carefully before first use. Please retain this information for future reference.

1. Remove your appliance from the packaging.
2. Check that there is no damage to the cord or any visible damage to the body or accessories.
3. Dispose of the packaging in a responsible manner.

INSTALLING THE CARRY HANDLE

To use the unit, start by installing the carry handle. To do this, attach the handle to the corresponding brackets on either side of the unit until it is firmly secured. Ensure the handle is firmly secured before attempting to move, lift or carry the unit.

4. Plug the unit in. The  indicator will light up and begin to flash to show the unit has been turned on.

NOTE: If the ice maker has been recently moved, allow thirty minutes between plugging it in and attempting to use it.


USING YOUR ICE MAKER

FILLING THE WATER TANK

To begin making ice, start by filling the water tank. To do this, carry out the following steps:


1. Open the ice maker lid
2. Lift the ice tray, using the two handles to either side of it, and remove it from the unit.
3. Fill up the space underneath the tray with water up to the MAX fill line, being careful not to overfill to ensure optimal functionality.

4. Once the water tank has been filled, return the ice tray to its position over the water tank. The two handles will automatically slot into place and secure the ice tray in position.
5. The unit is now ready for normal use.

NOTE: If at any point during a working cycle the unit runs out of water in the water tank, it will automatically stop working, and the  indicator will light up on the unit's control panel. When this occurs, add more water to the water tank, being careful not to fill it past the MAX fill line.


USING YOUR ICE MAKER



TURNING THE UNIT ON/OFF

1. Once the unit has been plugged in and the water tank has been filled, as described above, press the  button on the unit's control panel to turn it on. The indicator will light up solid and the unit will automatically start to operate.
2. Press this button again while the unit is in operation to pause or cancel the current working cycle. The unit will automatically stop working.


NOTE: A full working cycle takes about ten minutes and will produce eight ice bullets, which will be collected in the basket. A larger quantity of ice can be achieved by taking ice only as and when needed, and leaving unused bullets in the basket to be added into the next batch of ice produced.

SIZE SELECTION

1. This unit offers a choice between larger or smaller ice bullets, selectable at the press of a button. Press the  button to choose between larger and smaller sized bullets. The




corresponding indicator will light up on the control panel to show each size has been selected:  for the smaller size, or  for the larger size.

2. Press this button again while the unit is in operation to change sizes midway through a working cycle. The unit will automatically adapt to the new settings after a few seconds.

NOTE: When the ice tray is full, the  indicator will light up on the unit's control panel. When this occurs, use the included ice scooper to remove the ice from the tray and make room for more ice.

THE SELF-CLEANING FUNCTION

This unit is equipped with a self-cleaning function.

Press the  button until the  indicator lights up to select the self-cleaning function, then press the  button to automatically start a self-cleaning cycle.

NOTE: Ensure there is sufficient water in the water tank before attempting to carry out a self-cleaning cycle.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
The unit has stopped working midway through a cycle.	Not enough water in the water tank. The unit has malfunctioned.	Refill the water tank. Have the unit checked by a qualified professional.

CLEANING AND CARE

WARNING: Before cleaning and maintenance, switch the appliance off and remove the plug from the socket, to prevent electric shock.

- Do not immerse any part of the appliance, power cord or plug in liquids.
- Use a soft damp cloth to wipe the surface. Avoid using detergent, spray or chemicals as these may cause damage to the appliance.

WARNING: DO NOT allow water or steam to enter any part of the appliance other than the water tank, as this could cause it to malfunction.

- Store the appliance in a cool, dry place, ideally in its original packaging.

EMPTYING THE WATER TANK

- To empty the water tank, open up the unit's lid, remove the ice basket from

CLEANING AND CARE

inside it, then carefully tilt or drain the contents onto a sink or a suitable container. Ensure the water tank is fully drained before storing the unit.

- After emptying, wipe the water tank dry with a soft cloth. Ensure the water tank is fully dry before putting it back into place.

DESCALING INSTRUCTIONS/ WARNINGS.

- Empty and clean the appliance before storage. Clean the appliance before next use.

WARNING: Micro-organisms that may be present in the water or in the environment where the appliance is used

or stored, can grow in the water reservoir and be blown in the air causing very serious health risks when the water is not renewed and the tank is not cleaned properly every 3 days.

- Empty the tank and refill it every third day or whenever it becomes empty. Before refilling, clean it with fresh tap water or cleaning agents if required by the manufacturer.

STORAGE

- Ensure that the appliance is cool, clean and dry before you store it.
- Store the appliance in a cool and dry place.

DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



CUSTOMER SUPPORT

If you have any questions or concerns about your new product, please contact our helpful Customer Support Team:



+44 (0) 333 220 6066



www.towerhousewares.co.uk

Please have your Model No. available. This can be found on the front cover of this instruction manual and on the appliance's rating label.

TOWER®

BUILT FOR BETTER SINCE 1912

thank you!



We hope you enjoy your appliance for many years...

This product is guaranteed for 12 months from the date of original purchase.

If any defect arises due to faulty materials or workmanship, the faulty products must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

THE FOLLOWING CONDITIONS APPLY:

The product must be returned to the retailer with proof of purchase or a receipt.

The product must be installed and used in accordance with the instructions contained in this instruction guide.

It must be used only for domestic purposes.

It does not cover wear and tear, damage, misuse or consumable parts.

Tower has limited liability for incidental or consequential loss or damage.

This guarantee is valid in the UK and Eire only.

The standard one year guarantee is only extended to the maximum available for each particular product upon

registration of the product within 28 days of purchase. If you do not register the product with us within the 28 day period, your product is guaranteed for 1 year only.

To validate your extended warranty, please visit www.towerhousewares.co.uk and register with us online.

Please note that length of extended warranty offered is dependent on product type and that each qualifying product needs to be registered individually in order to extend its warranty past the standard 1 year.

Extended warranty is only valid with proof of purchase or receipt.

Your warranty becomes void should you decide to use non Tower spare parts.

Spare parts can be purchased from www.towerhousewares.co.uk

Or call our Customer Support Team on: **+44 (0) 333 220 6066**

